 


User's Manual

MOTION SENSOR TRASH CAN

Model: DZT-42-9/DZT-50-9

Overview

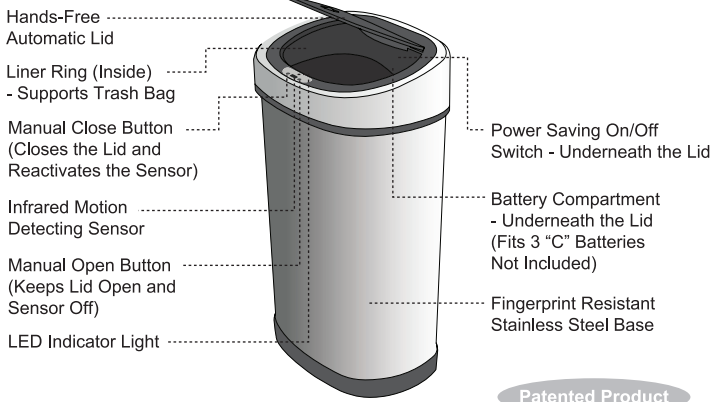

Model: DZT-42-9 and DZT-50-9
 Note: Trash can may not be the same size as the above photo. However, all functions are the same. This model is to be used in-doors at all times.

Step 6 - Using the trash can

Place your hand or an object within inches of the motion sensor (located on the lid). The lid will open instantly. Once your hand or object is out of the sensor range, the lid will close automatically within seconds. The lid will remain open if the object stays within the sensor range.



Additional Features

Keeping Lid Open Longer (Manual Mode)

- Press the "OPEN" button to keep the lid in the open position for a longer period. Press the "CLOSE" button to close the lid and reactivate the sensor.


Soft Close

- The lid has a soft close feature that will allow the lid to close at a slow and quiet pace.

Instruction


Step 1 - Remove all components from the box

- Lid
- Liner Ring
- Base

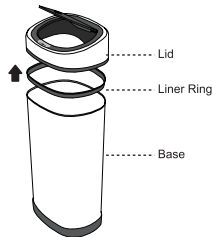


Step 2 - Insert batteries

Locate the battery compartment on the bottom of the lid. Squeeze the tab on the battery cap and carefully lift up to open. Insert three (3) HEAVY DUTY "C" size batteries. Insert the batteries in accordance with the positive (+) and negative (-) poles. To close, insert side with teeth first and push the battery cap down. Make sure it clicks to ensure that it's securely fastened.

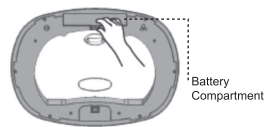

Step 3 - Insert trash bag

Insert the trash bag using the liner ring (see diagram). Fold the upper rim of the bag around the liner ring. Place the trash bag and the liner ring in the trash container. Tuck the bag completely into the bottom of the container so that the edges of the bag will be concealed once the lid is placed on top. ****DO NOT put the liner ring inside the bag****

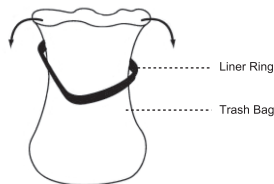


Step 4 - Trash can set up

Align the lid with the base and gently place the lid on top.



Step 5 - Turning the trash can On/Off

The power switch is located underneath the lid. When the switch is in the "I" position the trash can is ON. When the switch is in the "O" position the trash can is OFF.

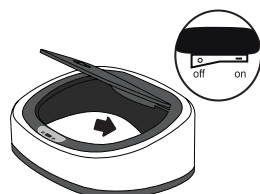

Technical Facts

LED light indicators:

- A. To turn ON the trash can:** Turn the power switch into the "I" position and a flashing red light will appear, which indicates the trash can is in sensor mode.
- B. To open the lid:** Waive above sensor, a solid GREEN light will appear when the lid opens.
- C. Lid closing:** A solid red light will appear when lid is closing.
- D. Low Battery:** A flashing yellow light will appear when battery power is low. Please replace batteries.

Warning

1. Align batteries according to the positive and negative poles.
2. Do not submerge the trash can into water because it is equipped with many electrical components. The trash can may be wiped with a damp cloth.
3. Do not manually force the lid close; this can cause damage to the internal gears. If the gears are damaged, the automatic lid will not function properly.
4. Replace used batteries in a timely manner to prevent battery acid leakage. Battery acid may cause damage to the electrical components of the trash can.
5. Do not mix new and used batteries.
6. Do not place trash can in direct sunlight or a heavily moisturized environment.
7. Do not mix alkaline, standard (zinc-carbon), or rechargeable (NiCd, NiMH, etc) batteries.

Troubleshooting

Errors	Solutions
Lid does not open	- Place the power switch in "I" position and check if batteries are placed in correctly.
	- Wipe the sensor with a dry cloth.
	- Press the "CLOSE" button to reset the trash can.
Lid does not close Indicator light is a constant Green	- Check to see if there are any objects within the sensor area. If there are, remove them.
	- If something is preventing the lid from closing, remove the item and press the "close" button to reset your trash can.
Lid opens slowly and indicator light flashes yellow	- Battery power is low. Replace the batteries.